

These instructions are applicable for the following pressure-reducing regulators: KPR, KCM, KCP, KCY, KPP, KPF, KHP, KLF, KHf, and KHR series.

### Kit Contents

Inlet filter (5)

### Tool Requirements

Filter insertion tool

Filter pick tool




### CAUTION

Before servicing any installed regulator you must depressurize the system and purge the regulator.

1. Remove the old **inlet filter** from the **inlet port (marked 'HP')** using the **filter pick tool**. Discard old filter.

### NOTICE

Be careful not to scratch the sides of the inlet port. Leakage could result.

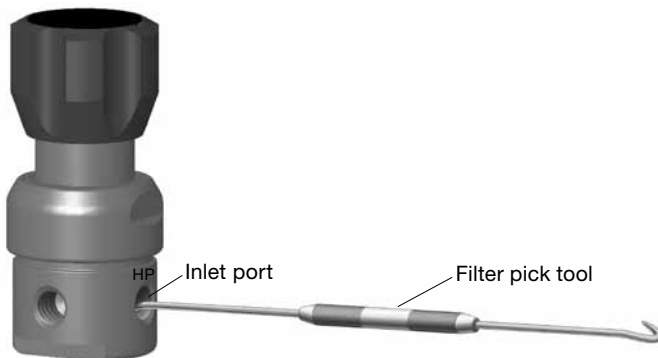

Discard  
inlet filter.

2. Insert the new **inlet filter** in the **inlet port (marked 'HP')** using the **filter insertion tool**.

### NOTICE

Do not insert the inlet filter with a sharp tool. Damage to the filter could result.

